


# GB TRKK 6850

## QUICK REFERENCE GUIDE

Please also carefully read the "Instructions for Use".

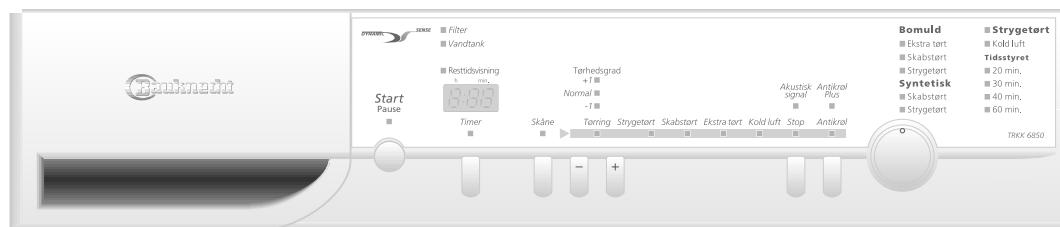

	Very Wet Load	Wet Load	Load	<div><div></div><div>Drying options</div><div></div></div>				Buzzer & Anti-Crease cannot be selected together		
	Indicative drying times (in minutes)							Kg	Fabric programmes & Drying levels	
Cotton	95' 135'	80' 110'	3.0 5.0	Cotton Bomuld max 5 kg	<div>Ekstra tørt</div> <div><div></div><div></div></div> Cupboard extra dry	Bomuld	Bomuld	Bomuld	Bomuld	Bomuld
	80' 110'	60' 90'	3.0 5.0		<div>Skabstørt</div> <div><div></div><div></div></div> Cupboard dry *	Bomuld	Bomuld	Bomuld	Bomuld	Bomuld
	60' 90'	50' 70'	3.0 5.0		<div>Strygetørt</div> <div><div></div><div></div></div> Iron dry *	Bomuld	Bomuld	Bomuld	Bomuld	Bomuld
Synthetics	25' 45'	20' 35'	1.0 2.5	Synthetics Syntetisk max 2.5 kg	<div>Skabstørt</div> <div><div></div><div></div></div> Cupboard dry *	Syntetisk	-	Syntetisk	Syntetisk	Syntetisk
	20' 35'	15' 25'	1.0 2.5		<div>Strygetørt</div> <div><div></div><div></div></div> Iron dry	Syntetisk	-	Syntetisk	Syntetisk	Syntetisk
Delicate	30'	20'	1.5	Delicate ■ Strygetørt max 1.5 kg	Especially for delicate items (e.g. shirts).	-	-	■ Strygetørt	■ Strygetørt	-
Airing	-	-	-	Airing ■ Kold luft	Laundry is aired and refreshed for 30 minutes without heating.	-	-	■ Kold luft	■ Kold luft	■ Kold luft
Time	-	-	-	■ 20 min. ■ 30 min. ■ 40 min. ■ 60 min.	Completes drying or dries single items (suitable for all fabrics).	-	-	■ 20 min. ■ 30 min. ■ 40 min. ■ 60 min.	■ 20 min. ■ 30 min. ■ 40 min. ■ 60 min.	■ 20 min. ■ 30 min. ■ 40 min. ■ 60 min.

Start Pause	Starts the drying cycle. The Start/Pause indicator lamp is blinking during the selection phase. Press to confirm the final selection.
Programme selection	Turn the programme selector knob to the desired programme. The indicator next to the programme name lights up. The start indicator blinks to show, that the dryer is in selection mode. After the Start / Pause button is pressed the start indicator lamp lights up and the programme starts.
Start delay	Delays the drying cycle start from 1 up to 12 hours. To select the start delay turn the programme selector knob to the desired programme, select the desired options and press the start delay button. With each touch of the start delay button, drying cycle start is delayed by one hour. Press the Start/Pause button to confirm your final selection. Start delay indicator blinks and the count-down is running by reducing the time in one hour steps. The count-down is indicated by the blinking of the start-delay indicator located above the button. During count-down the drum will turn from time to time to redistribute the laundry and the pump may be heard working for a short time. To cancel or to change the previously set time turn programme selector knob to "0" or open the door.
Remaining time indication	After cycle start a default drying time is indicated depending on the selected drying programme and the dryness adjustment. After several minutes the time will be adjusted to the real expected remaining time, depending on size, type and humidity of the load.
Dryness Adjustment	Dryness adjustment is an option to adjust the dryness of the laundry according to your wishes. Select the desired programme and the option dryness level adjustment by pressing the button "+" for more dry or the button "-" for more humid. The selected dryness will be stored as a pre-setting to the selected drying programme. Using the drying programme next time the pre-setting appears. By pressing the dryness adjustment buttons "+" or "-" the pre-setting can be changed.
Filter	The indicator lamp lights up when the filter needs cleaning. Clean the filter at the end of every cycle.
Water Container	Lights up when water container needs to be emptied. The drying cycle is automatically interrupted. Empty the water container. Press the Start/Pause button to restart the dryer and to continue the programme.
PROGRAMME SEQUENCE INDICATION	
End	The programme sequence is indicated by lamps, switching on when programme step starts and switching off when the programme step is passed.
Stop	

\* Test programmes according IEC 61121

5019 407 00124

## PREPARING THE LAUNDRY

1. Check that all fastenings are closed and that pockets are empty.
2. Turn the articles inside out.
3. Place laundry loosely in the drum to make sure it doesn't become tangled.

Sort laundry as follows:

### A) By care symbols (on the collar or inside seam):



Suitable for tumble drying



Tumble drying with reduced drying intensity only. Press gentle button



Do not tumble dry

### B) By amount and thickness/weight

Whenever the load to be dried exceeds dryer capacity, separate laundry according to weight (e.g. towels from thin underwear).

### C) By type of fabrics

**Cotton/linen:** towels, cotton jersey, bed and table linen made of cotton or linen.

**Synthetics/Easy Care:** blouses, shirts, overalls, etc. made of polyester or polyamide, as well as cotton/synthetic mixes.

### D) By drying level

- Sort into: iron dry, cupboard dry, etc.

**Do not tumble dry:** woollens, silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

**Important: only use specific indicated dryer-safe additives** and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. **Only use specific indicated dryer-safe plastic items** and never dry rubber or articles contaminated with vegetable oil in the dryer

## SELECTING A PROGRAMME & OPTIONS

### Programme and Options:

- To select a programme, turn the programme selector knob to the required position. The Start/Pause indicator lamp is blinking, indicating that the cycle needs to be started.
- To select an option, press the corresponding button. The indicator light above the button lights up confirming that the selection has been made.
- Press the option button again to cancel the option.

## STARTING & COMPLETING A PROGRAMME

1. Having selected the desired programme and options, press the Start/Pause button.  
If the laundry is not removed at the end of the drying cycle, an automatic anti-crease cycle will operate for maximum 60 min. The drum rotates at regular intervals, preventing the laundry from creasing.  
**Anti-Crease protection re-distributes laundry in the drum.**  
When the Anti-Crease option is selected and laundry has not been taken out, an anti-crease cycle is activated for 12 hrs.
2. On completion of the programme, set the programme selector knob to position "0".

## CHANGING A PROGRAMME

When changing the programme during the drying cycle, the dryer stops. The Start/Pause indicator lamp is blinking. To operate the new programme, press the Start/Pause button.

## INTERRUPTING A PROGRAMME

### To interrupt the dryer during operation

1. Set the programme selector knob to Airing.
2. Press the Start/Pause button.  
Wait at least 5 minutes before opening the door to allow the dryer to cool down.  
For your safety the programme stops automatically if you open the door.
3. To restart, after door opening, close the door and press the Start/Pause button again.

## DAILY MAINTENANCE & CLEANING

### Clean the lint filter at the end of every drying cycle:

1. Open the door.
2. Pull the filter upwards.
3. Open the filter.
4. Remove lint using a soft brush or your fingertips.
5. Close the filter.
6. Push the filter back into place.

### Empty the water container at the end of every drying cycle.

1. Pull the handle to remove the water container.
2. Empty the water container.
3. Replace the water container when empty by pushing it **completely** back in place.

## TROUBLESHOOTING GUIDE

**If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:**

**Drying takes too long / laundry is not dry enough:**

- Was the correct programme selected?
- Was the inserted laundry too wet (Washing machine spin speed less than 800 rpm? When the spinning speed is less than 800 rpm the water container fault may occur during the drying cycle)?
- Is the lint filter dirty (filter indicator lamp on)?
- Is the heat exchanger dirty (refer to the Instructions for use)?
- Is the ambient temperature too high?

**The dryer does not operate:**

**(after a power failure and/or interruption to the mains supply, always press the Start/Pause button).**

- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door properly closed?
- Has the programme been selected?
- Has the start-delay option been selected?
- Has the **Start/Pause** button been pressed?

**Lint filter or water container indicator lamp on:**

- Is the lint filter clean?
- Is the water container empty?
- Is the water container correctly positioned?
- Is the heat exchanger clean?

**Water droplets underneath the dryer:**

- Is the heat exchanger correctly positioned?
- Has any fluff on the heat exchanger seal been wiped away?
- Has any fluff on the door seal been wiped away?
- Has the water container been positioned correctly?

**All programme sequence indicators blinking:**

- Service call necessary.

**Replacing the drum light bulb (if supplied):**

- If the inside lamp does not work, the bulb may be faulty.
- **Unplug the dryer.**
- Open the door and unscrew the glass cover inside the drum.
- Replace the faulty bulb with a new one and screw the glass cover back on.
- Replacement bulb: Philips 15W, 230/240V, E14.

## AFTER-SALES SERVICE

If, after carrying out the above checks the malfunction persists or appears again, turn the dryer off and call our After-Sales Service (refer to guarantee).

Please specify:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.
- Your full address and phone number.

**SERVICE** 0000 000 00000



5019 407 00124